
ACN BROADBAND TECHNICAL FAQ

A. How to change your Wi-Fi password / Wi-Fi Username for Inotech?






- 1. Connect to the Wi-Fi / LAN Cable,
- 2. Open the web browser (Google chrome / Firefox). Type in the address bar "192.168.1.1".
- 3. Inotech Router will open.
- 4. The default Username of the device will be "admin".
- 5. The default Password of the device will be "admin"

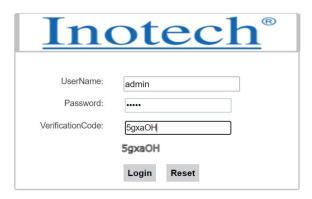


- 6. Enter the Verification Code.
- 7. Then enter Login.
- 8. Click on "WLAN".

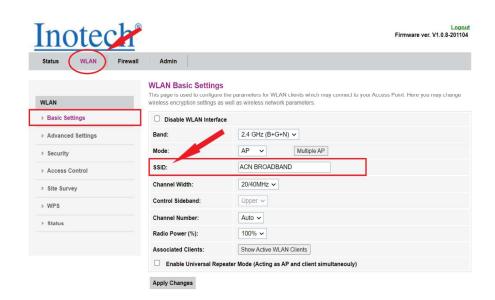



- 9. Click on Basic Settings.
- 10. To set your Wi-Fi Name click on **SSID** (Service Set Identifier) box.
- 11. Type your desired Wi-Fi name in the option provided as "SSID".
- 12. Select channel Width as 40Mhz
- 13. After giving your Wi-Fi name, click on "Apply Change", Then Click Ok, to save your settings. Please Confirm that the "Disable WLAN Interface / Hide SSID" option is not checked. This will hide your Wi-Fi from all connected devices.
- 14. To set your Wi-Fi Password, Click on "Security"

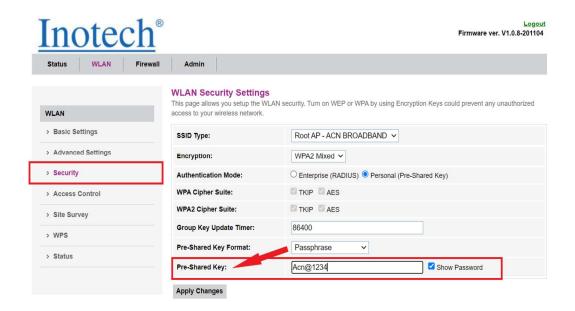

- 15. Set your Encryption as "WPA2 Mixed". Pre-shared Key Format as "passphrase".
- 16. Enter your desired password. In "**Pre-shared Key**" box, your password length has to be between 8 to 64 characters with at-least 1 Uppercase and 1 Special Character.
- 17. Then Click on "Apply Change" to save your settings.
- 18. Then Logout Successfully.

